

User manual

Cable Handswitch for installation in the desktop

HSE

Rev 3



ш LL ſ γ o U ſ Ο LL Ζ 0 T I O \geq

LOGIC office

Subject to change without notice. Errors and omissions excepted.

LOGICDATA cannot accept responsibility for incorrect operation or use of the products other than for the intended purpose. Under the warranty terms, **LOGICDATA** shall replace or repair any products

that prove defective at the time of delivery. LOGICDATA shall not assume any further liability.

If you have any questions or special requests, please contact LOGICDATA direct. ©2011 LOGICDATA

www.logicdata.at



LOGICDATA Electronic & Software Entwicklungs GmbH

Wirtschaftspark 18 A-8530 Deutschlandsberg · Austria Tel.: +43 (0)3462 51 98 Fax: +43 (0)3462 51 98 530 e-mail: office@logicdata.at





0.76 -

Contents

1. Pre	face	3
2. Ger	neral	3
2.1	Intended Use	3
2.2	Definition	3
2.3	Functionality HSE	3
2.4	Package Contents	4
2.5	Overview	5
2.6	Handswitch Plug	5
3. Mo	unting Instructions	
4. Fur	nctions	7
4.1	Display	7
4.2	Basic Functions	
4.3	Advanced Functions	8
4.3	.1 Change displayed height	8
5. Tec	chnical Data	
6. App	pendix	9
6.1	Possible Errors and Solutions	
7. Fur	ther Information 1	0
7.1	End of life disposal 1	0
7.2	Manufacturer 1	0





1. Preface

Dear customer,

Thank you for choosing a desktop integrated Handswitch HSE by **LOGICDATA Electronic & Software Entwicklungs GmbH**. You have purchased a state-of-the-art product.

2. General

2.1 Intended Use

The desktop-integrated handset HSE must be used with **LOGICDATA** control boxes. The HSE handswitch allows you to operate your height-adjustable desk from its surface, it is sunk into the tabletop, which gives you complete freedom in its placement and allows easy access. The control box must be installed, initially operated and functional tested by competent personnel only. Use other than described above is only allowed with permission of **LOGICDATA**.



Information: For all information concerning **LOGICDATA** control boxes please refer to the corresponding manual.

2.2 Definition



Information: For definitions and information concerning **LOGICDATA** Control boxes please refer to the applicable manual.

Aside of moving your table up and down your **LOGICDATA** control box is able to carry out other functions, like controlling the brightness of a lamp or a monitor – height adjustment. This function is called second motor group.

2.3 Functionality HSE

The HSE handswitch offers following functionality:

- Ergonomic design
- No protruding parts
- Durable Foil-Buttons
- Compatible with all LOGICDATA control boxes
- Fast and easy mounting





2.4 Package Contents

The HSE handswitch package contains:



Figure 1: Package contents

- ① HSE
- ② screws



Danger: Use only genuine replacement parts! Repairs must be carried out only by a qualified service technician! If you neglect to do so you void your warranty!





2.5 Overview

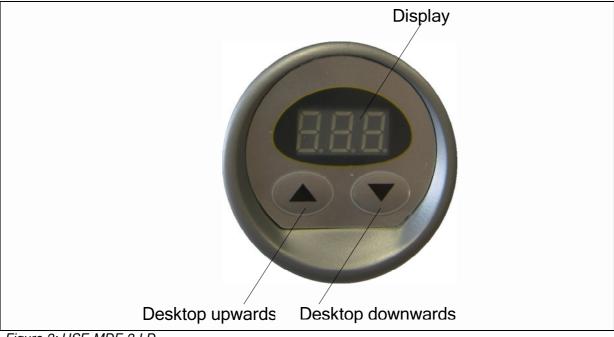


Figure 2: HSE-MDF-2-LD

2.6 Handswitch Plug

Handswitch socket

$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	1	RxD	5	HS2
	2	HS3	6	TxD
	3	HS1	7	+5V
	4	HS4	Shell	Ground

(pin alignment according to DIN 45329)



Caution: The HSE handswitch is only suitable for LOGICDATA motor controls. To prevent damage of the unit, take care not to interchange handswitch and motor sockets.

Colour code: Handswitch: blue Motor: black





3. Mounting Instructions

Mount the HSE handswitch in an appropriate position.

1. Unpack the handswitch.



Note: Dispose of the packaging material ecologically sound (separate plastic foil and cardboard)!

- 2. Mill a mounting hole with 50mm diameter¹.
- 3. Insert the desktop-integrated handset HSE into the mounting hole from the top.
- 4. Fix the HSE with the 2 enclosed screws underneath the desktop.



Figure 3: Step 4

5. Connect the handswitch to the control box using the jack marked with US only! Do not connect the handswitch plug to the motor jacks!



Caution: Unplug the power cord of the control unit while mounting the handswitch!

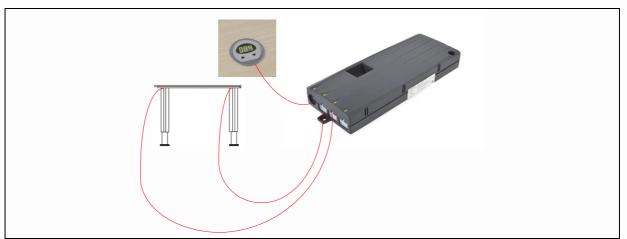


Figure 4: Connecting the HSE (e.g. COMPACT)

¹ The diameter of the mounting hole also depends on the material of the desktop. We recommend determining the diameter on the basis of a sample.





4. Functions

The HSE handswitch is capable of a wide range of functions, which are described below.

4.1 Display

The display of the HSE handswitch consists of a 3 digit position and information display.



4.2 Basic Functions

Function	Description	Note
Desk upwards	For an upward adjustment of the desk push this button. Push this button until the desired height of the desk has been reached.	The desk will continue driving upwards until you release the button, or the maximum height is reached.
Desk downwardsFor a downward adjustment of the desk push this button. Push this button until the desired height of the desk has been reached.		The desk will continue driving downwards until you release the button, or the minimum height is reached.

If you have the version with integrated display (HSE-MDF-2-LD), the current height of the desk will be displayed on your handset.






4.3 Advanced Functions

4.3.1 Change displayed height

This function allows you to change the displayed height. This procedure changes only the displayed height – the desk will not move.

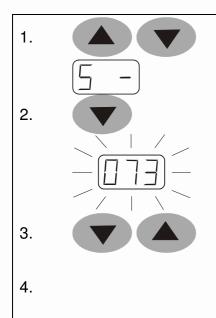

Press the **Up** and **Down** keys simultaneously and hold them until them until the display reads **S** -.

The display reads S -.

Release the **Up** key. Press and hold the **Down** key.

After approximately 5 seconds, the display will change to the current height and start to blink.

You may now adjust the displayed height using the **Up** and **Down** buttons.

If you do not press any button for at least 5 seconds, the display stops flashing and the selected height will be the new displayed height.

5. Technical Data

Supply voltage	5VDC ± 10%
Current consumption (average)	60 mA
Life cycle (switching cycles)	10.000
Ambient temperature	0 – 50 ° C
Cable length	2000 mm ± 20mm
Dimensions (I, w, h)	126mm x 70 mm x 25mm
	Without mounting plate
Weight	0,1 kg (incl. Cable)





6. Appendix

6.1 **Possible Errors and Solutions**

This chapter offers detailed information on possible troubles and solutions:

Display does not work (buttons work)

Possible Cause	Solution
Cable is defect	Contact our customer service
Display is defect	Contact our customer service / change the handswitch
Microcontroller is defect	Contact our customer service / change the handswitch
Handswitch is defect	Contact our customer service / change the handswitch

T4 0115 .

Buttons do not work (display works)


Possible Cause	Solution
Cable is defect	Contact our customer service
Handswitch is defect	Contact our customer service / change the handswitch

Handswitch does not work (neither display nor buttons)

Possible Cause	Solution	
Cable is not plugged	Plug the plug in the intended jack marked	
Cable is not plugged as intended	with HS.	
Bad pin contact	Plug off the plug an plug it in as intended (as described above)	
Cable is defect	Contact our customer service	





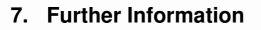

7.1 End of life disposal

Please heed following disposal instructions when disposing of the HSE handswitch:



Note: Dispose of the components ecologically sound (separate plastic from electronics parts)!

T* (775 *

7.2 Manufacturer

LOGICDATA	Tel.: +43 (0)3462 5198 0
Electronic & Software Entwicklungs GmbH	Fax: +43 (0)3462 5198 530
Wirtschaftspark 18	Email: office@logicdata.at
A-8530 Deutschlandsberg	www.logicdata.at

