


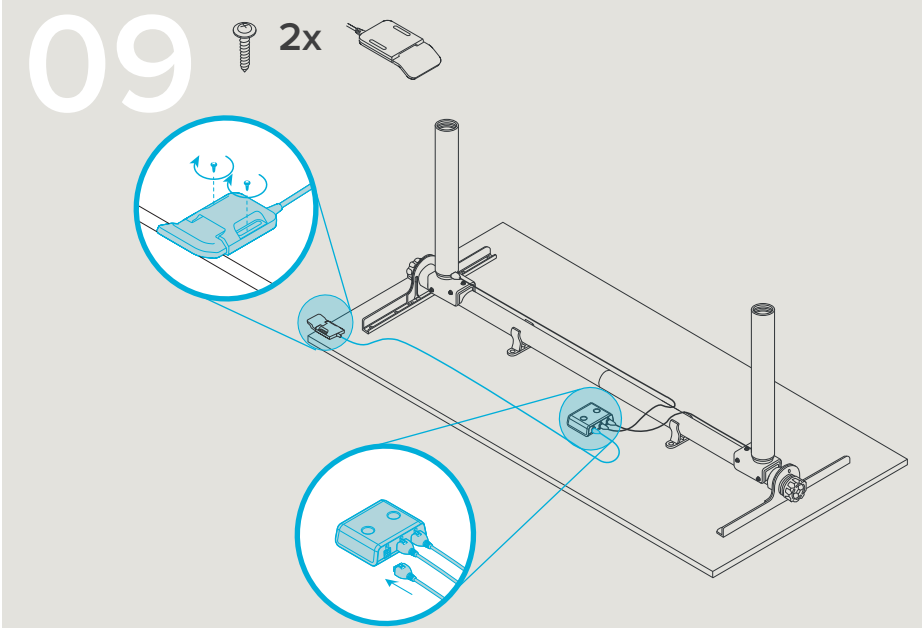
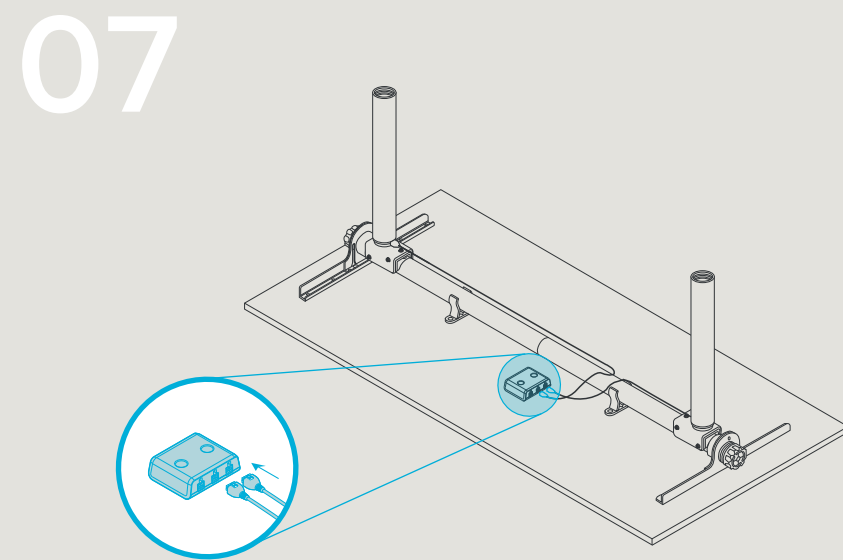
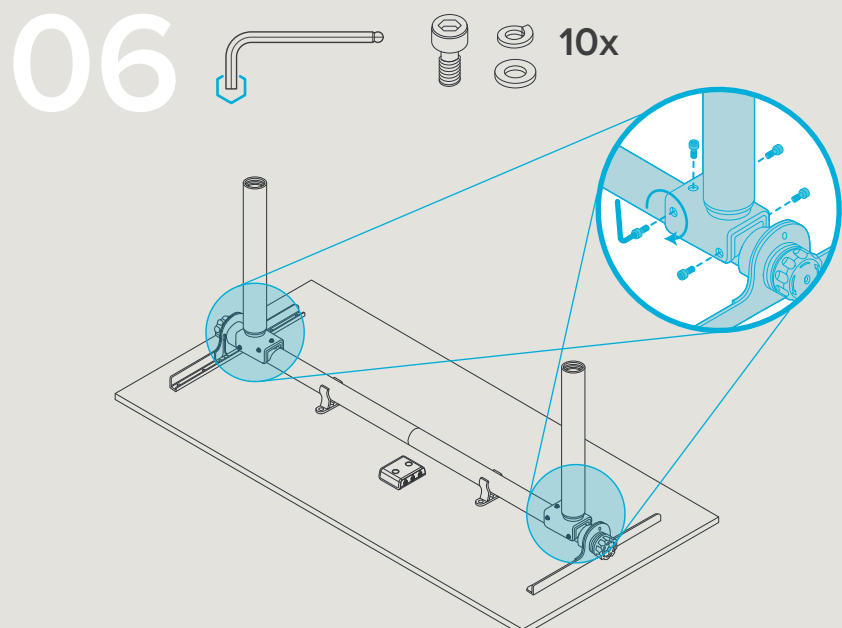
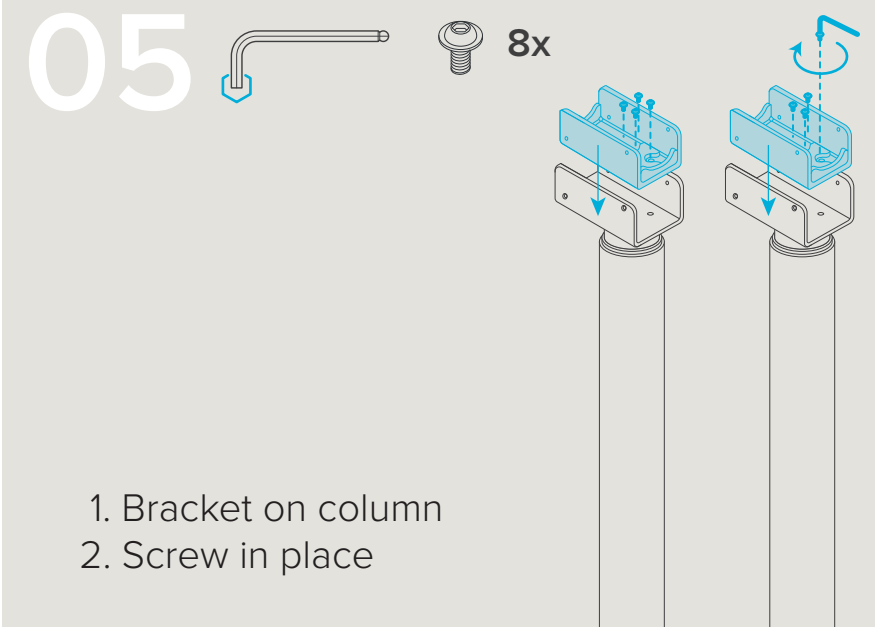
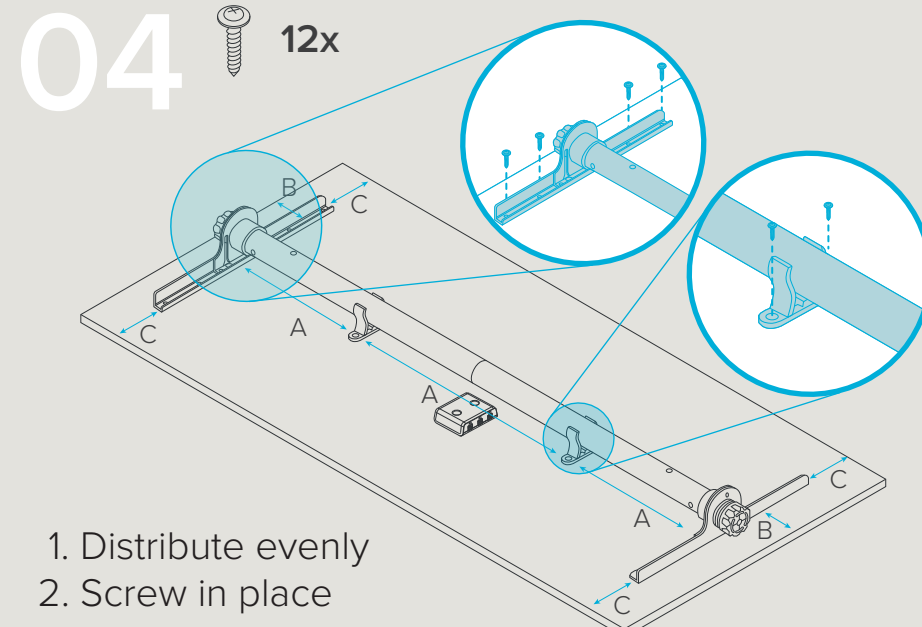
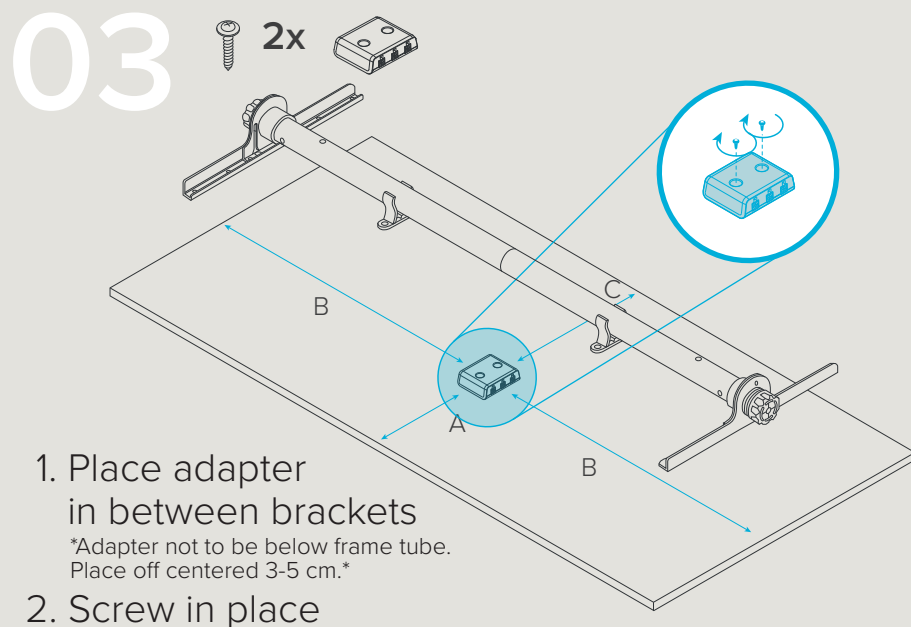
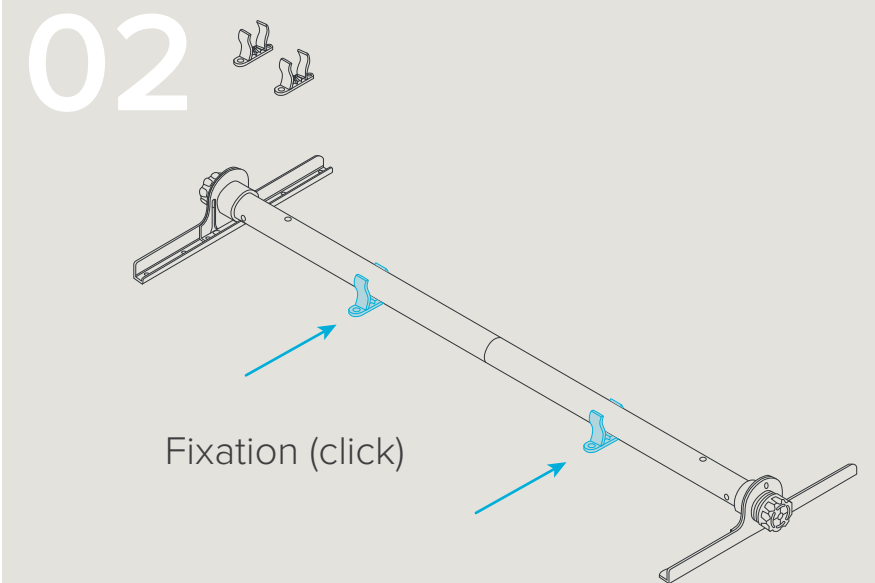
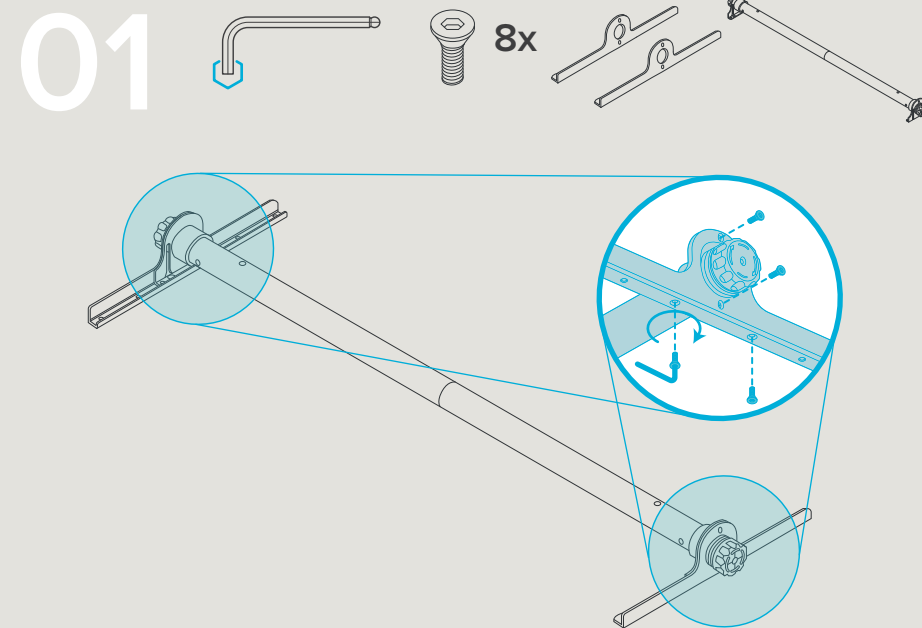


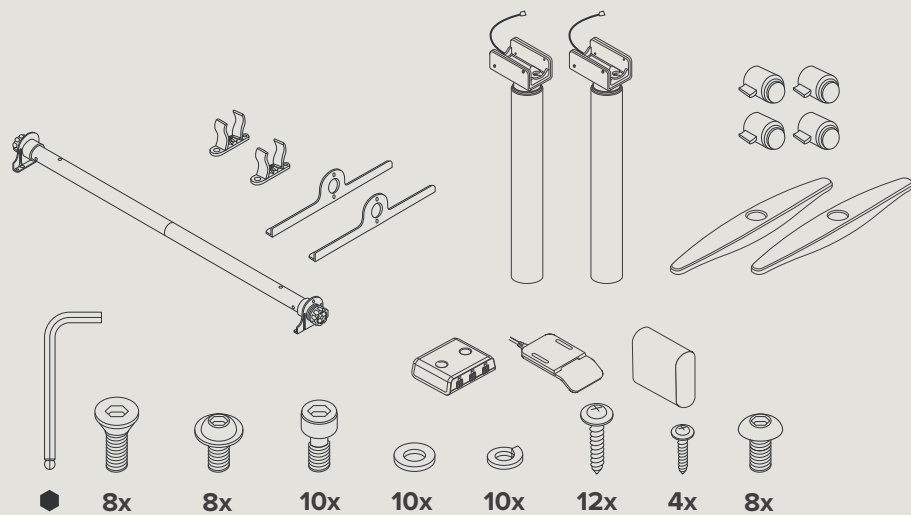


08

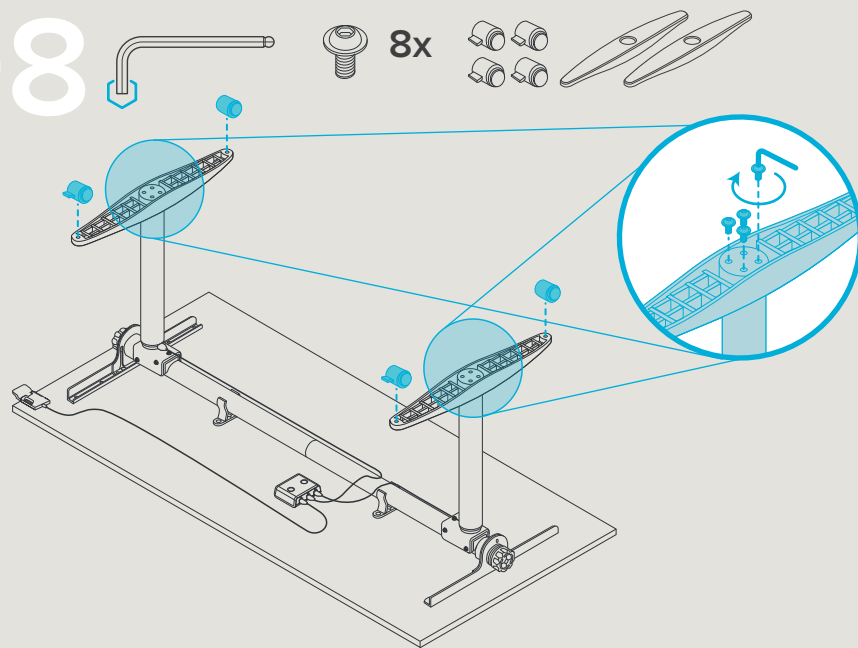


10

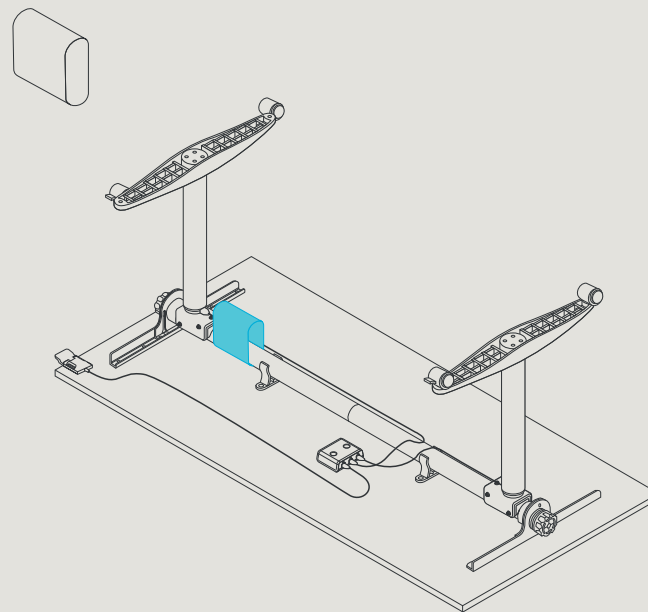

11


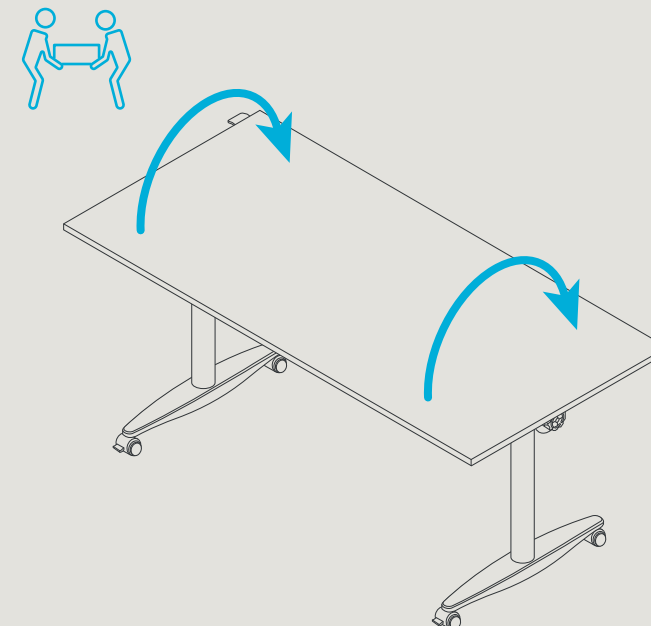


12

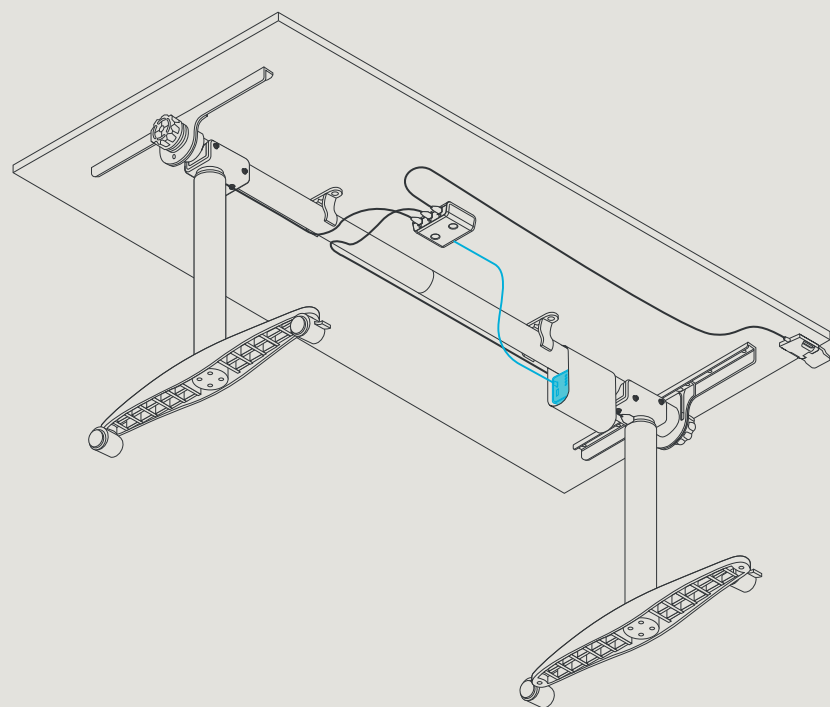


13

1. Gently push and hold down the paddle until the Table stops at the lower position limit.
2. Release the Paddle.
3. Push and hold down the Paddle again.
- the Table will move down slightly, then up again.
4. Release the Paddle.
- the Position Reset Procedure is complete.

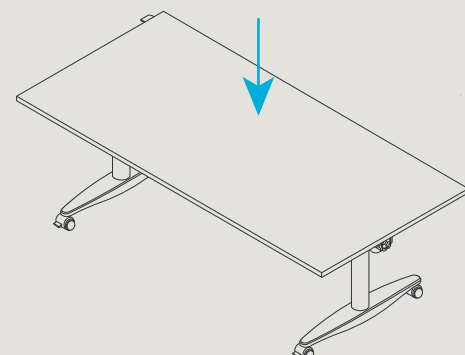
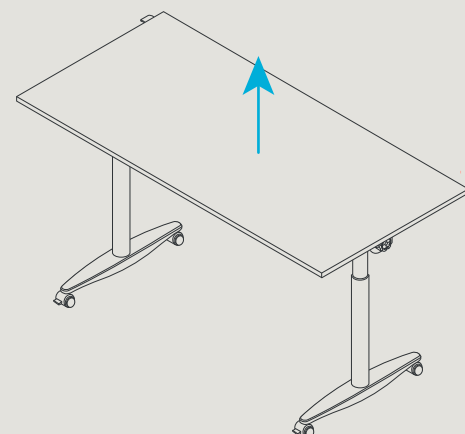


Reset

When blinking "0" drive down table to lowest position. Keep pressing "down" until current actual height is shown.

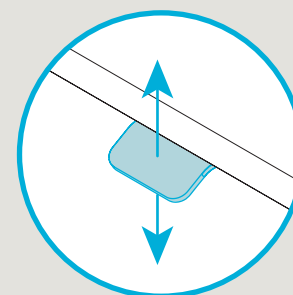

14

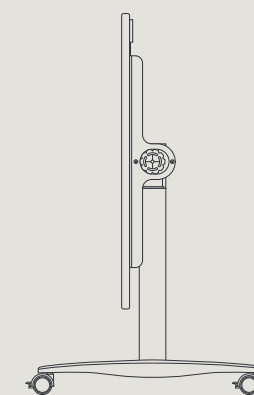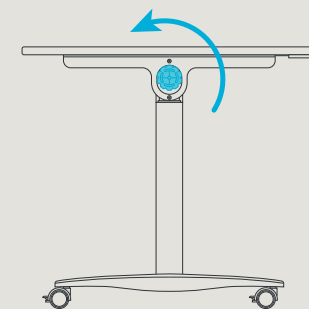

1. Connect Battery Pack (not included)
(must be USB-PD 3.1 compliant; Power > 140 W)
or wall charger to USB-C adapter
2. Put Battery Pack in battery bag